

ATTENTION PLEASE: Read the following instructions when you use the HP cards with machines except Model 321.

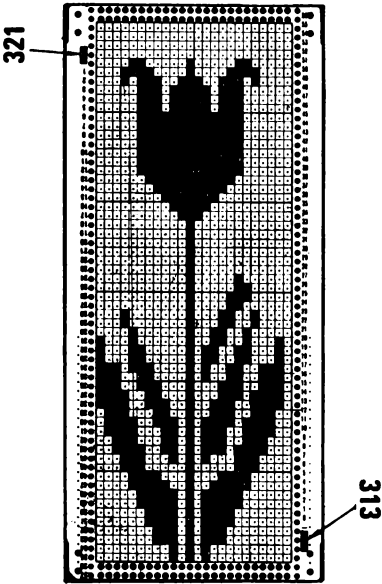


Fig. 1

1. Use a HP card with the indication 313 pointing toward the bottom of the right side. (Fig. 1)
 - (1) Draw your pattern on a sectioned sheet.
 - (2) Relation between pattern and hole position:

	Hole positions punched	Hole positions not punched
Tuck knitting	Knit	Tuck (Non-knitting, yarn is over the hook)
Slip	Knit	Slipped (Non-knitting, yarn crosses in front)
Fair Isle (Knit-In)	Knit with the yarn of yarn feeder	Knit color yarn
Weaving	Weaving yarn is threaded above	Weaving yarn is threaded below
Lace knitting	Knit	Pulled up

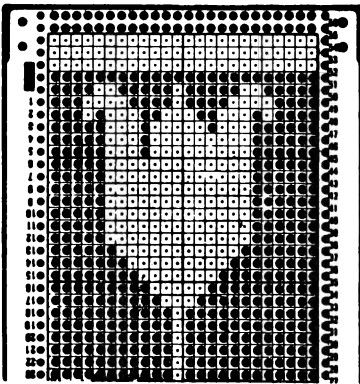


Fig. 2

2. Transfer the pattern to the HP card.
3. Using the handy punch, perforate the HP card.
4. Perforate a row (24 holes) at the end of the pattern. (Fig. 2)
5. Indicate a stop mark on the HP card where the card should be stopped for repeating pattern. The mark is to be indicated on the 3rd row from the last row. If the last row is ended at the 50th row, the marking will be on the 53th row.

ATENCIÓN POR FAVOR: Lea las instrucciones siguientes cuando Ud. usa las tarjetas HP con otras máquinas que no sean la 321.

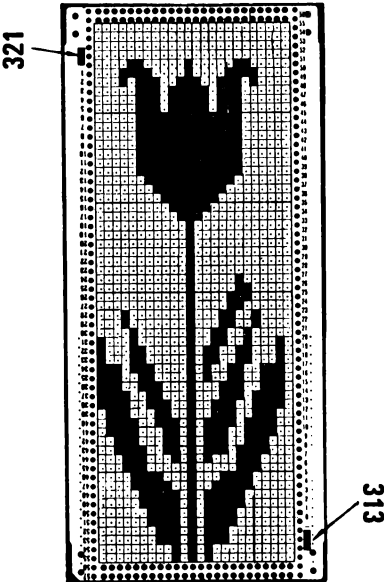


Fig. 1

1. Use la tarjeta HP con la marca indicativa 313 apuntando hacia la parte inferior del lado derecho. (Fig. 1)
 - (1) Dibuje el motivo en una hoja cuadrículada.
 - (2) Relación entre la área perforada de la tarjeta y el dibujo que se hace:

	Area perforada de la tarjeta	Area no perforada de la tarjeta
Tejido Recogido	Teje	Recogido (Sin tejer, la lana queda sobre el gancho)
Tejido Deslizado	Teje	Deslizado (No teje, la lana queda cruzada en el frente)
Entretejido	Teje con hilo del alimentador	Teje con hilo de color
Tejido de Trama	El hilo de la trama queda por encima	El hilo de la trama queda por debajo
Tejido Calado	Teje	Se hala hacia arriba

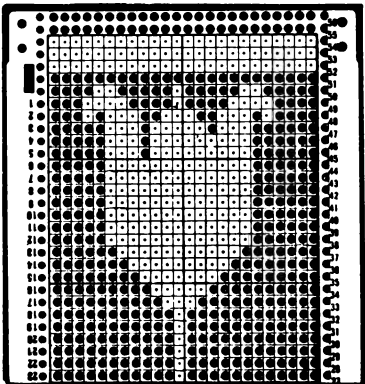


Fig. 2

2. Traslade el dibujo a la tarjeta HP.
3. Usando la perforadora manual perfore la tarjeta HP.
4. Perfore todas las secciones (24 orificios) de la última fila. (Fig. 2)
5. Ponga la marca STOP que indica el final de carreras contenidas en cada tarjeta. La posición de la marca STOP se encuentra en la tercera carrera de la última fila la cual fué perforada en el paso 4. Por ejemplo, si Ud. ha perforado la última fila en número 50, la marca STOP será colocada en número 53.